

# User's Manual




## Pocket InfraRed Thermometer Model IR201A

### Introduction

Congratulations on your purchase of Extech's IR201A Pocket InfraRed Thermometer. This device is used to take non-contact temperature measurements simply by pointing the meter and pressing a button. This meter, with proper care, will provide years of safe reliable service.

### Description

- 1 Infrared sensor
- 2 Laser Pointer
- 3 Measurement button
- 4 Laser button
- 5 MENU button
- 6 Battery compartment (rear)
- 7 LCD display
- 8 Lanyard attachment point

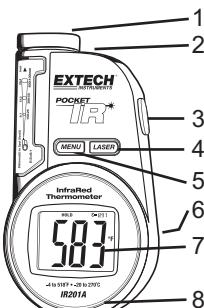

### Setup

The Setup mode allows for setting: Max or Min display, °C or °F display, Emissivity value, Lock continuous mode, High alarm limit and Alarm On/Off. Enter the Setup mode by taking a measurement then press the MENU button to step through and adjust the features. Each press of the MENU button advances to the next feature.

- 1 Press the Measure button to turn the meter on.
- 2 Press the MENU button to step to the Max/Min selection. Press the LASER button to set either MAX (blinking) or MIN (blinking) and then press and hold the Measure button to measure using the selection
- 3 Press the MENU button to step to the C/F selection. Press the LASER button to set either C or F (blinking) and then press the Measure button to confirm the selection.
- 4 Press the MENU button to step to the Ems (emissivity) increase ▲ selection. Press the LASER button to increase the ε (blinking) value and then press the Measure button to confirm the selection.
- 5 Press the MENU button to step to the Ems (emissivity) decrease ▼ selection. Press the LASER button to decrease the ε (blinking) value and then press the Measure button to confirm the selection.
- 6 Press the MENU button to step to the LOCK selection. Press the LASER button to set LOCK On and then Press & Hold the Measure button for two seconds to begin continuous measurements. Press the LASER button to cancel the LOCK mode.
- 7 Press the MENU button to step to the HI (High Limit) increase ▲ selection. Press the LASER button to increase the value and then press the Measure button to confirm the selection.
- 8 Press the MENU button to step to the HI (High Limit) decrease ▼ selection. Press the LASER button to decrease the value and then press the Measure button to confirm the selection.
- 9 Press the MENU button to step to the Alarm On/Off selection. Press the LASER button to set either ON or OFF and then press the Measure button to confirm the selection and exit.




### IR Measurements

- 1 Point the meter toward the surface to be measured
- 2 Press and hold the MEASURE button. The meter will turn ON, "SCAN" will blink and the measured temperature will be displayed.
- 3 Release the MEASURE button and the last reading will be held (HOLD will appear) in the display for approximately 6 second and then the meter will turn off.
- 4 In the measure mode, press the LASER button to turn the laser pointer on or off.

### Measurement considerations:

- The thermometer must be acclimated to ambient temperature for accurate measurements. Allow approximately 30 minutes acclimation time when the storage area and use area have a large temperature differential.
- If known, adjust the emissivity value to match the emissivity of the surface being measured. If unknown, use 0.95.
- The surface measured should be cleaned of frost, dust or other materials before accurate measurements can be made.
- Recommended measuring distance is 2" to 36" (5cm to 91cm)
- Apply black tape or paint to highly reflective surfaces to increase the emissivity and improve the accuracy of the measurement.
- The object being measured should be larger than the spot size as illustrated in the distance to spot diagram.

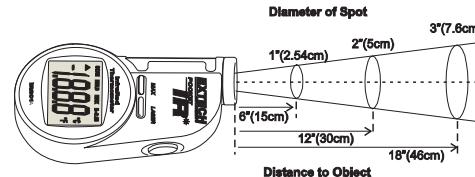

### Battery Replacement

The battery icon appears when the batteries need replacing. Open the battery compartment on the rear of the meter, replace the batteries and close the compartment.



Never dispose of used batteries or rechargeable batteries in household waste.

As consumers, users are legally required to take used batteries to appropriate collection sites, the retail store where the batteries were purchased, or wherever batteries are sold.

Disposal: Do not dispose of this instrument in household waste. The user is obligated to take end-of-life devices to a designated collection point for the disposal of electrical and electronic equipment

### Specifications

Display	LCD display
Power off	Automatic shutoff after approx. 8 seconds
Laser power	Laser power less than 1mW (red)
Distance to Target Ratio	6:1
Emissivity settings	0.10 to 1.0 adjustable
Operating Temperature	0 to 50°C (32 to 122°F)
Operating Humidity	Max. 80% RH
Power Supply	2 x AAA battery
Weight	76g / 2.7 oz.
Size	94 x 51 x 25 mm (3.7 x 2 x 1")

### Range Specifications

Ranges(Resolution)	-20 to 270°C / -4 to 518°F (0.1°C/F)
Accuracy	± (2.5% of reading + 2°C or 3.6°F)

Copyright © 2013-2016 FLIR Systems, Inc.

All rights reserved including the right of reproduction in whole or in part in any form  
ISO-9001 Certified

[www.extech.com](http://www.extech.com)